

10.11.3 Mounting

Mounting with 3-phase busbars

Note

Current carrying capacity

When extending the busbars, please take their current carrying capacity into account.

The diagrams below illustrate the mounting procedure for the 3-phase busbar system:

3RV2 size S00 / S0

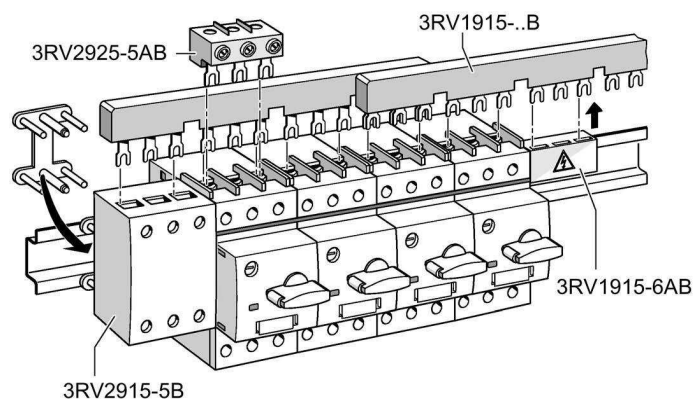


Figure 10-4 Mounting with 3-phase busbar (3RV2 size S00 / S0)

3RV2 size S00 / S0 with 3RV1011

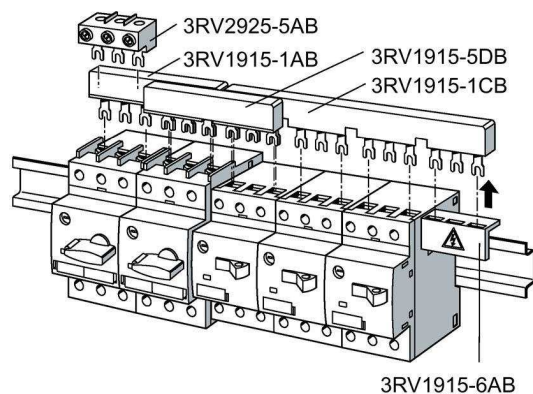


Figure 10-5 Mounting with 3-phase busbar (3RV2 size S00 / S0 with 3RV1011)